



Adjusting your headset for fit

To adjust your headset, twist the rear headstrap adjustment knob for a snug fit, then tighten the top strap.

If your headset still feels loose, add the rear cradle adapter to the back.

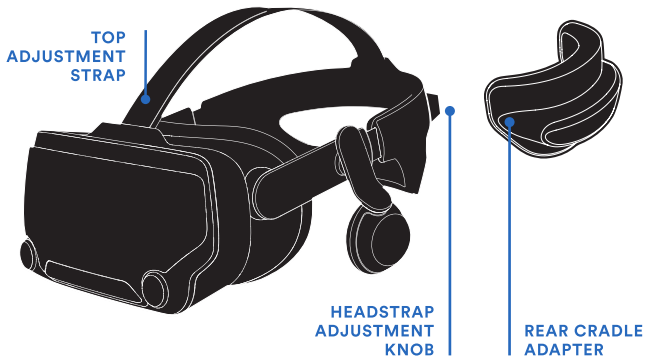

Fine-tuning image clarity

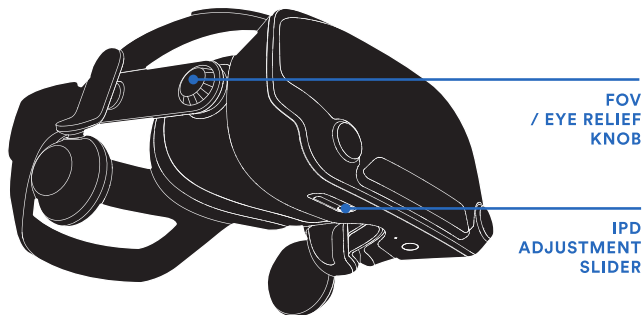

To optimize image clarity, move the IPD adjustment slider while wearing the headset. This moves the lenses to match the distance between your eyes.

To maximize field of view, push in and twist the FOV / eye relief knob. Position displays as close to eyes or glasses as is comfortable.