


Unpacking:


Steps:

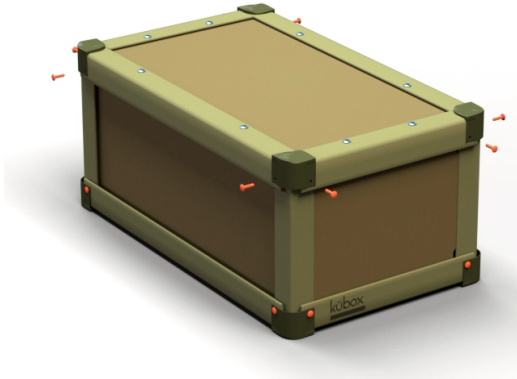

There are 16 pins total:

- 4 corner hubs on the **top**
 - 2 pins in each
- 4 corner hubs on the **bottom** of the box
 - 2 pins in each

Locate the 8 nylon pins located in the **top** corner hubs of the lid. Remove the nylon pins using a Phillips screwdriver, or other object (removal tool) to pry them out.

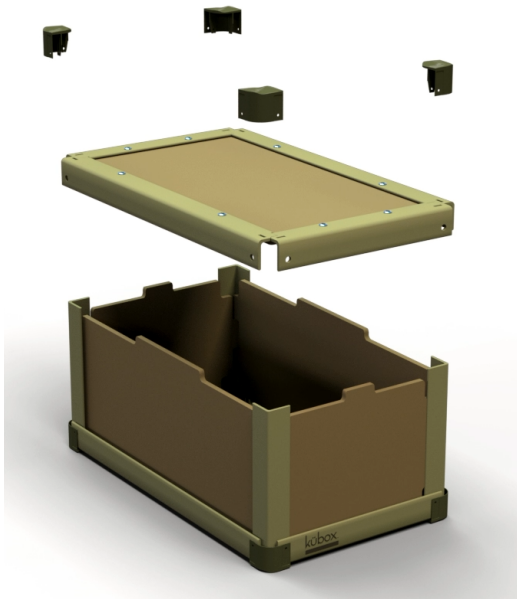


Lift the 4 **top** corners hubs and remove the lid.




kübox™

Unpacking Guide

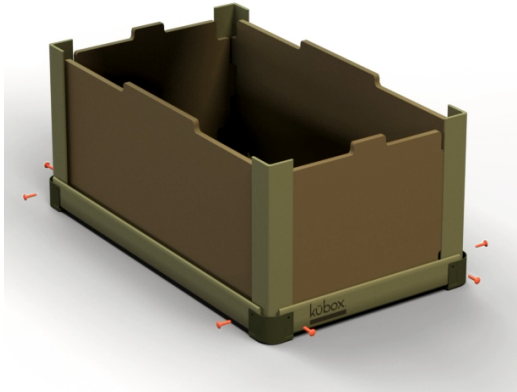

Continue to remove the 8 nylon pins in each of the bottom 4 corner hubs.

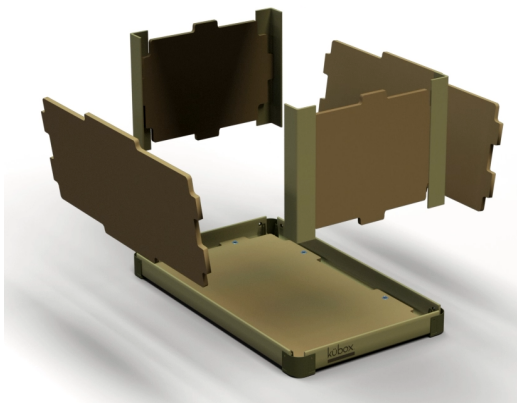

Lift and remove the 4 side walls and their corner braces from the bottom corner hubs.



(back, bottom, between the wheels)

Lift SimSpray out of the box and slowly tip it to stand upright on its wheels.

Grip and lift SimSpray using any of the following areas on the back of the SimSpray:

- the metal axle between the wheels, on the bottom of the unit
- the metal shipping rails on its back
- the metal handlebar at the top

Do not attempt to hold SimSpray by the plastic casing. This may damage your unit. Use the pictured locations to grip, lift, and maneuver SimSpray.



(back left and right side shipping rails)



(back top, handlebar)