


Overview

This document describes how to prevent the Oculus Rift HMD's (Head Mounted Display's) cable from becoming removed during use. It is possible during use that this cable is tugged on and can cause the Oculus to stop working. The symptom of this is the light above the eye lenses will be black, even when the SimSpray unit is powered on.




Instructions

1. On the left side of the Oculus, extend the 2 attached cables so there is slack. You may need unclip the Oculus clip (in red box in the below image) and reclip it in.

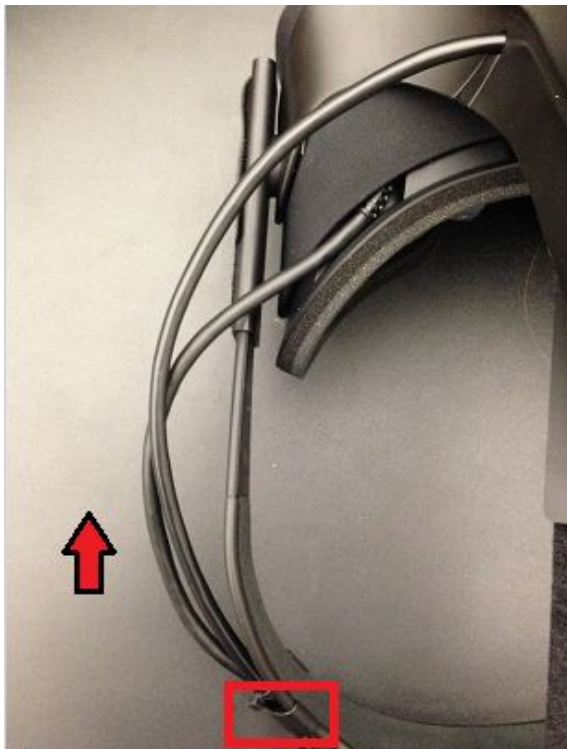

2. Unstrap the velcro straps on both sides of the Oculus. Then extend the Oculus arms at the sides to their fullest.

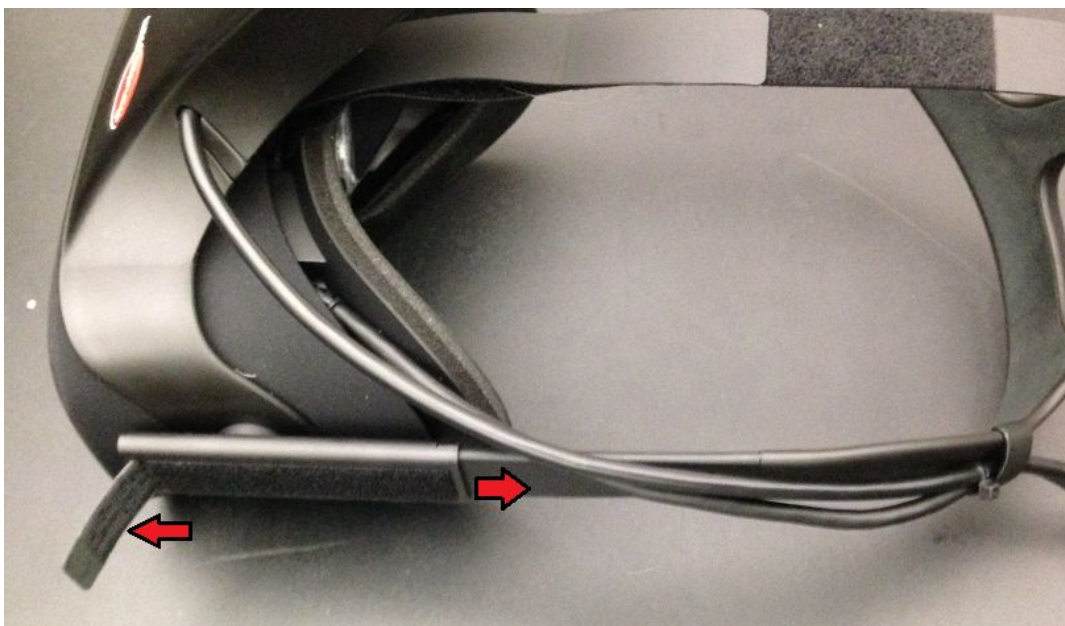

3. Adjust the cables so you still have slack in both cables.
4. Add a ziptie or something to hold onto both cables and prevent the cables from moving back down through the Oculus clip.



5. Use the Oculus as normal.

